

3. How to enter new code in Door closed?

> Present Code > # > New Code >

- Step 1 : Push **#** button (LED flickers with Bi sound)
 Step 2 : Push Present Code buttons (LED flickers with Bi sound)
 Step 3 : Push **#** button (LED flickers on with melodic tone)
 Step 4 : Push New Code buttons (LED flickers on with Bi sound)
 Step 5 : Push **#** button (Melodic tone)

EX) If the present code is 1 2 3 4 and the new code is 5 6 7 8,
 push following buttons.

#1234#5678# (Melodic tone)

4. When to replace batteries?

If door is not opened in spite of exact code entered (LED flickers with sound and melodic tone), it indicates that battery is not strong enough to actuate the solenoid. Then, four batteries should be replaced all together with new ones. (1.5V AA Alkaline 4 pcs)

- The personal code is not erased even if battery is completely exhausted.
- Battery life span : 2 years (In case of three door openings a day)


diplomat
SAFE LTD

1583-4 SONGJUNG-DONG GANGSEO-GU BUSAN, KOREA TEL (82 51) 831-4400 FAX (82 51) 831-4409
 E mail : info@dsafe.co.kr www.dsafe.co.kr


* To improve products constantly, Diplomat Safe reserves the right to alter the specifications without prior notice.
 Printed in Korea, Feb. 08, 2006 REV. 3

INSTRUCTION


for DIGITAL LOCK

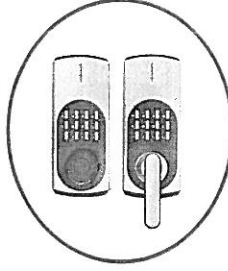

EDL77

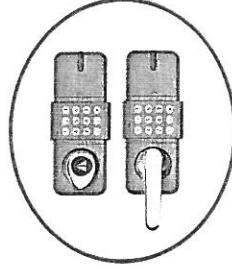

EDL21

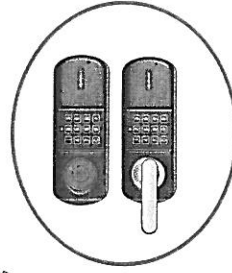




EDL20

Quality reputed worldwide
diplomat SAFE

HOW TO OPERATE *diplomat* DIGITAL LOCK?

1. How to open ?

- Slide the battery housing cover to the right to open and load batteries. (1.5V AA Alkaline 4 pcs) Then, LED flickers with Bi Bi Bi sound.

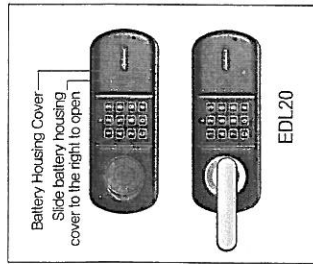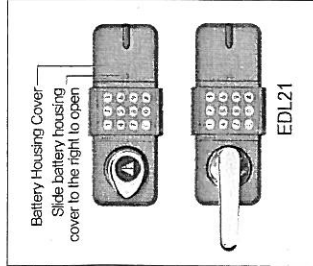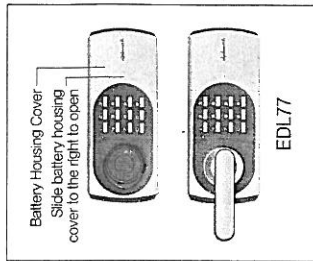

- The initial code from the factory is **1 2 3 4**.

- Step 1 : Push **C** button (LED flickers with Bi sound)
- Step 2 : Push the Code buttons (LED flickers with Bi sound)
- Step 3 : Push **#** button (LED flickers on with melodic tone)
- Step 4 : Turn knob (or handle) clockwise and open the door while melody rings (3 seconds).

Note : ① In case that wrong code is tried, it sounds Bi Bi Bi.

② If wrong codes are tried over 5 times, the lock gets paralysed and doesn't work.

How to release the lock from paralysis?

- Enter the original code twice consecutively as in the opening procedure. (No sound but LED flickers when each button pushed. If the procedures are completed exactly, the lock recovers with melodic tone).

EX **C 1 2 3 4 # C 1 2 3 4 #** (LED on, Melodic tone)

2. How to enter your personal code ?

★ 1st Code in Door opened, M > New Code >

- Step 1 : Push Memory button **M** on the door back. (LED flickers on with Bi sound)
 - Step 2 : Push New Code buttons (4 digits min to 16 digits max, LED flickers on with Bi sound)
 - Step 3 : Push **#** button (Melodic tone)
- EX) If a new code is decided 2 1 0 0, push buttons as below.
M 2 1 0 0 # (Melodic tone)

★ 2nd Code in Door opened, M > 2 > # > New Code >

- Step 1 : Push Memory button **M** on the door back. (LED flickers on with Bi sound)
 - Step 2 : Push **2** button (LED flickers on with Bi sound)
 - Step 3 : Push **#** button (LED flickers on with Bi — sound)
 - Step 4 : Push 2nd New Code buttons (4 digits min to 16 digits max, LED flickers on with Bi sound)
 - Step 5 : Push **#** button (Melodic tone)
- EX) If a new code is decided 4 4 0 0, push buttons as belows.
M 2 # 4 4 0 0 # (Melodic tone)

▲ Caution : To confirm if the code is exactly entered, push the code in opening procedures prior to closing door.

For example, in case of your code 4 4 0 0, push button **C 4 4 0 0 #**. If the procedure is properly done, melody rings for three seconds.

★ How to erase the 2nd code? (Door opened, M > # > 2 > #)

- Step 1 : Push **M** button on the door back (LED flickers on with Bi sound)
- Step 2 : Push **#** button (Bi sound)
- Step 3 : Push **2** button (LED flickers with Bi sound)
- Step 4 : Push **#** button (Bi — sound)